


DPM PROGRESSIVE DIVIDERS WITH VISUAL INDICATOR



The visual control indicators allow you to view movement of the pistons and consequent correct operation of the entire system. They are normally on the main divider (**master**) but as they cannot indicate any breakage in secondary pipes, we recommend installing them in one or, if possible, all secondary dividers. The indicator is moved by the metering piston on which the indicator is applied. The construction shape of the part allows it to be used in stop and go operating systems where several cycles can be performed if necessary, but they cannot be used in continuous operation systems. Should it be necessary later on to change from visual to electric control, just apply the case of the control microswitch to the body of the visual indicator because the activation mechanism is identical for both. When placing the order, you must also always specify whether the visual control must be placed on the right or left of the entrance, adding the letters **dx** if on the right and **sx** if on the left, to the divider code.

Ordering codes of dividers complete with visual indicator

| PART NUMBER | NUMBER OF PISTONS | PART NUMBER | NUMBER OF PISTONS |
|-------------|-------------------|-------------|-------------------|
| 02.881.3 | 3 | 02.881.7 | 7 |
| 02.881.4 | 4 | 02.881.8 | 8 |
| 02.881.5 | 5 | 02.881.9 | 9 |
| 02.881.6 | 6 | 02.882.0 | 10 |

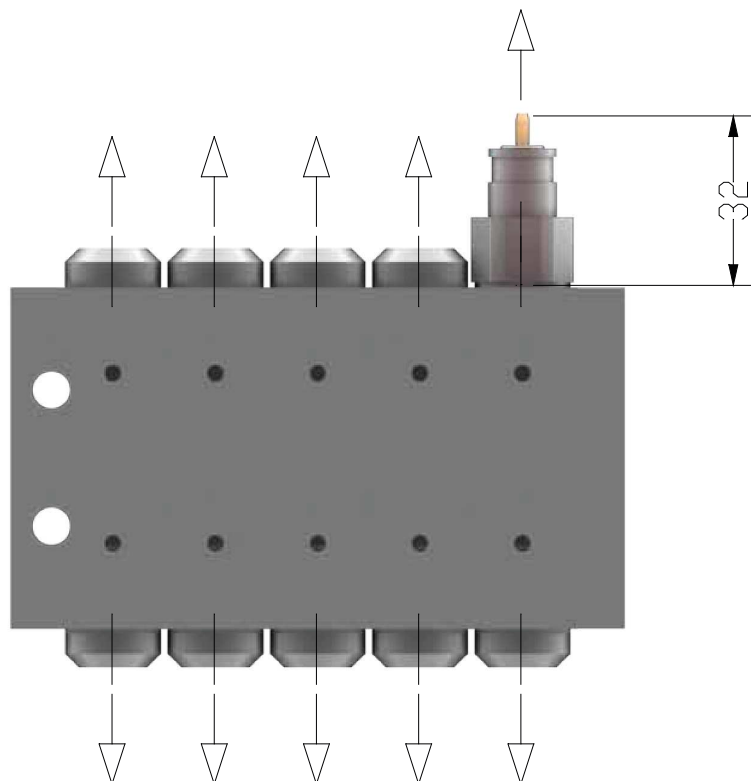

The appearance of the products can be subject to change without prior notice